


## ArcadePro Mars Cocktail Arcade Machine User Guide

### Setting Up

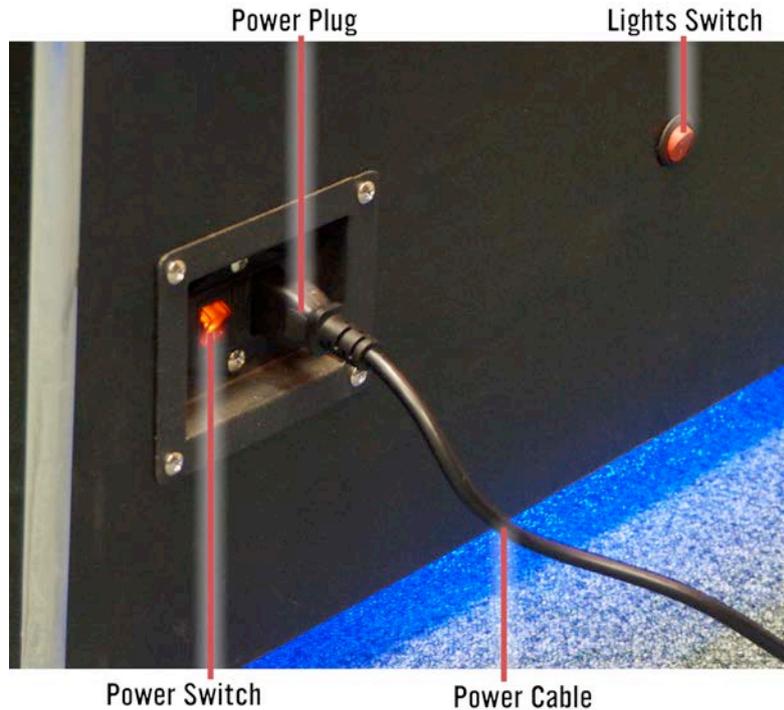


### Powering Up

To switch the unit on, plug the power cable into a wall socket, then the connecting lead into the **Power Plug** on the side of the machine. Power the machine on by flipping the power switch to on. The machine will power on, and load up the games menu.

### Controlling the Lighting

The under lighting on the machine can be powered on or off depending on your preference. The lighting can be switched on or off using the **External Lighting Switch** on the side of the machine. Note that this does not control the illuminated buttons.

## Neptune Controls (Side)

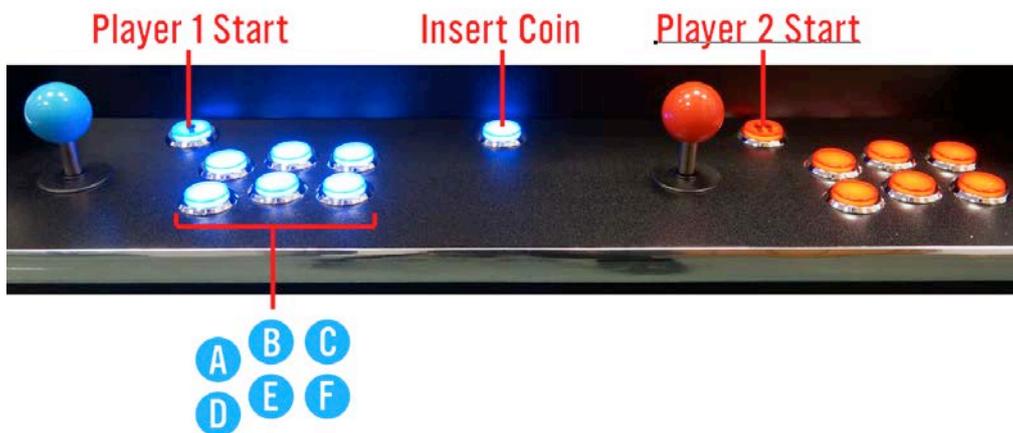

## To Play a Game

To play a game, you must first 'insert coins' into the machine. You can do this by pressing **Insert Coin** button.

You can now navigate through the menu using the joystick, and select your game using the **Player 1 Start** button.

## Switching Games Lists

The ArcadePro Neptune separates games depending on whether they are meant to be played in portrait (vertically) or in landscape (horizontally). Upon start up, the Neptune will load the landscape games list.

If you wish to switch another games list, simply hit the Player 1 **B** button on either set of **controls**. The new games list will load in, allowing you to make a selection with the relevant set of controls. You are free to switch between games lists whenever you wish when in the games menu.


## Starting and Exiting Games

After a game is selected, you can begin either a one-player game with the **Player 1 Start** button, or a two-player game with the **Player 2 Start** button. If playing games in portrait mode, then each player has their own controls on their respective sides of the machine. Some games may require inserting additional 'coins' to play. Do so with the **Insert Coin** button.

To exit any game, hold the **player 1 start button** and the **insert coin button** together until the exit menu is displayed. This menu will allow you to either quit back to the games list, or to resume playing whatever game you are currently playing.

## Changing The Volume

You can access the amplifier controls inside the machine via a door in the other side of the machine. Unlock the door with the included key.

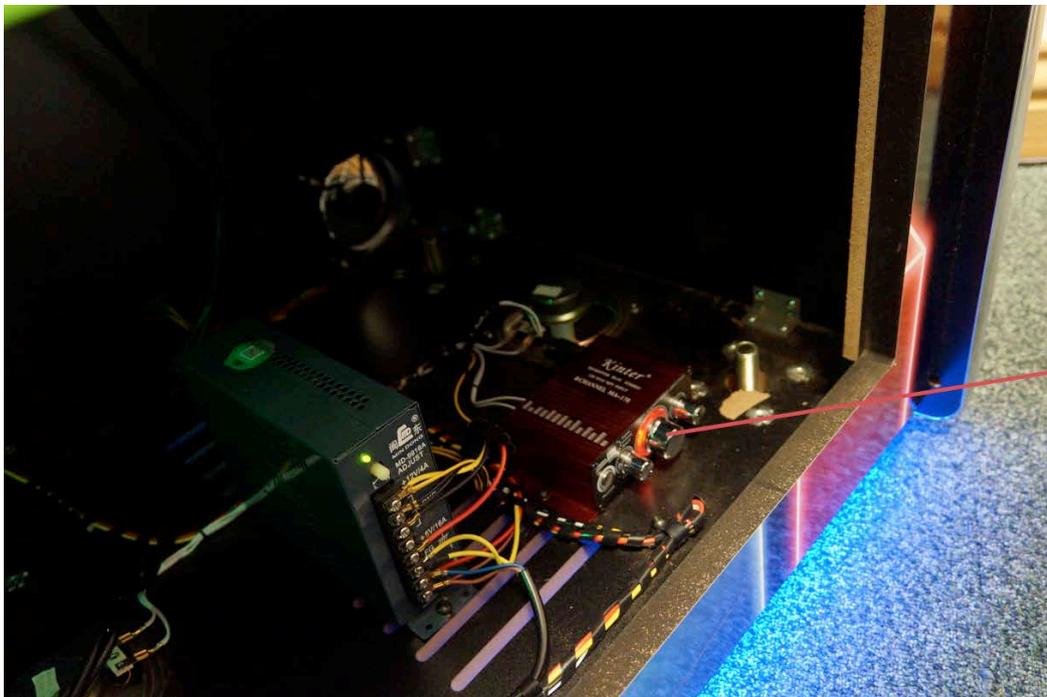

Amplifier  
Controls

## Changing the Volume

The amplifier controls can be just inside of the machine as seen above. The large central dial changes the volume, and the smaller dials will alter the bass and treble respectively. The amplifier can be switched off completely using the push-button the left of the dials.

When done, you can simply close the door and lock up again.

## Adjusting the Feet



The ArcadePro Mars' feet can each be individually adjusted.

To adjust the feet, simply twist the feet in either direction to move up or down. If needed, you can use a 22 mm spanner to turn the nut to the desired level.

**Have Fun!**