


ArcadePro Venus Bar Top Arcade Machine User Guide

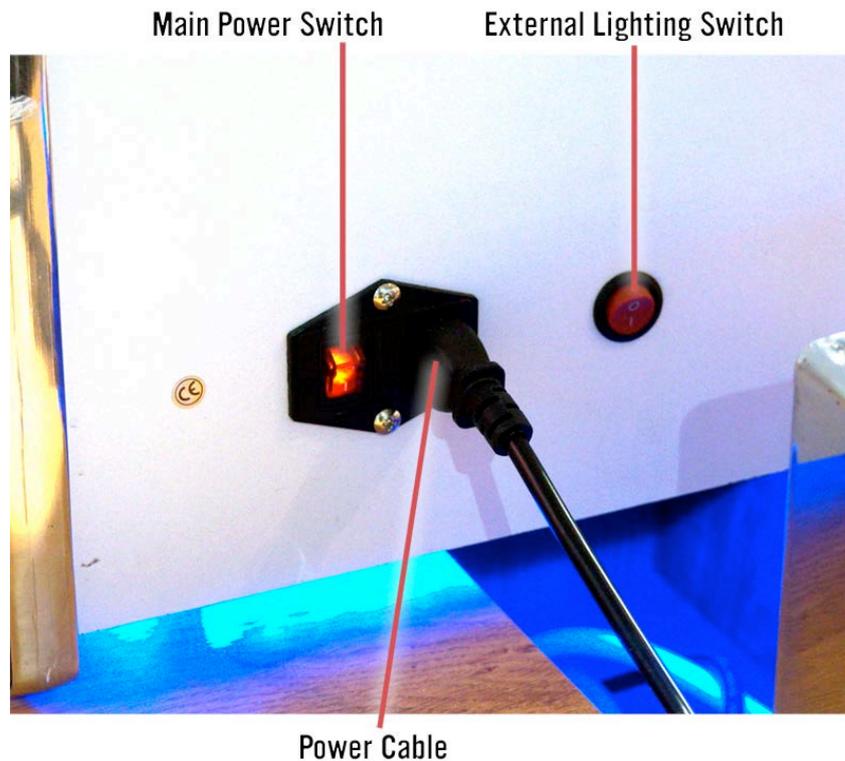

Powering Up

To switch the unit on, plug the **power cable** into a wall socket, then the connecting lead into the single black plug on the rear of the machine. Power the machine on with the **Main Power Switch** immediately to the left of this plug. The machine will power on, and load up the games menu.

Controlling the Exterior Lighting

The exterior lighting on the machine can be powered on or off depending on your preference. The lighting can be switched on or off using the **External Lighting Switch** on the back of the machine.



To Play a Game

To play a game, you must first 'insert coins' into the machine. You can do this by pressing **Insert Coin button on the left side of the cabinet** (if viewed from the front). Each press of the button adds one credit.

You can now navigate through the menu using the joystick, and select your game using the **A Button**.

Starting and Exiting Games

After a game is selected, you can begin either a one-player game with the **Player 1 Start** button, or a two-player game with the **Player 2 Start** button.

To exit a game, you can do so by **pressing and holding both the Insert Coin Button and the Player 1 Start Button**.

Changing the Volume


The amplifier controls can be altered or switched off entirely with the small controls on the front of the unit. The large dial in the middle will alter the volume. The smaller dials can change bass and treble.

The amplifier can be switched on or off with the push-switch just to the left of the dials.

Changing Settings

You can change various machine and game settings using the settings menu. You can access the settings menu by pressing the **blue button on the right side of the cabinet** (if viewed from the front)

The settings menu contains many options. Use the **A** button to make selections and the **D** button to go back. The key options are outlined below:

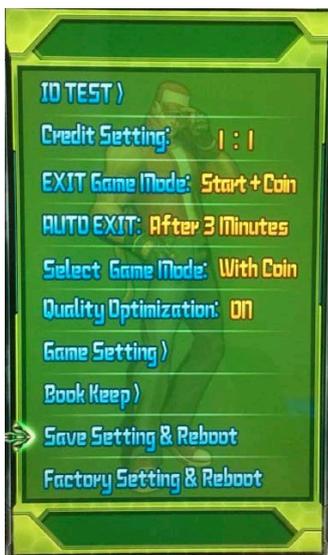

IO TEST : Check the functionality of each button and the joysticks

Credit Setting: Change how many credits are added with each button press.

EXIT Game Mode: Change the buttons required to exit games back to the games menu

AUTO EXIT: Change when a game will automatically end and return to the main menu.

Game Setting: Change individual aspects of each game to make it easier or harder.

Save Setting & Reboot: Exit from the settings menu, saving any changes. The system will reboot to the games menu.

Factory Setting and Reboot: Reset any changes that have been made to factory default. The system will reboot to the games menu.

Changing Game Settings

Upon entering the Games Setting menu, you are presented with a list of all 1299 games. Scroll through the list with the joystick, then use the A button to select whatever game you wish to make changes to.



The right hand side of the screen will show the options that can be changed. Use the A, B or C buttons to change the values, and then use the D button to save and exit.

Have Fun!