

ARCADÉPRO[®]


Neptune



Home[®]
LEISURE
DIRECT
- Serious Fun -

User Manual

Setting Up

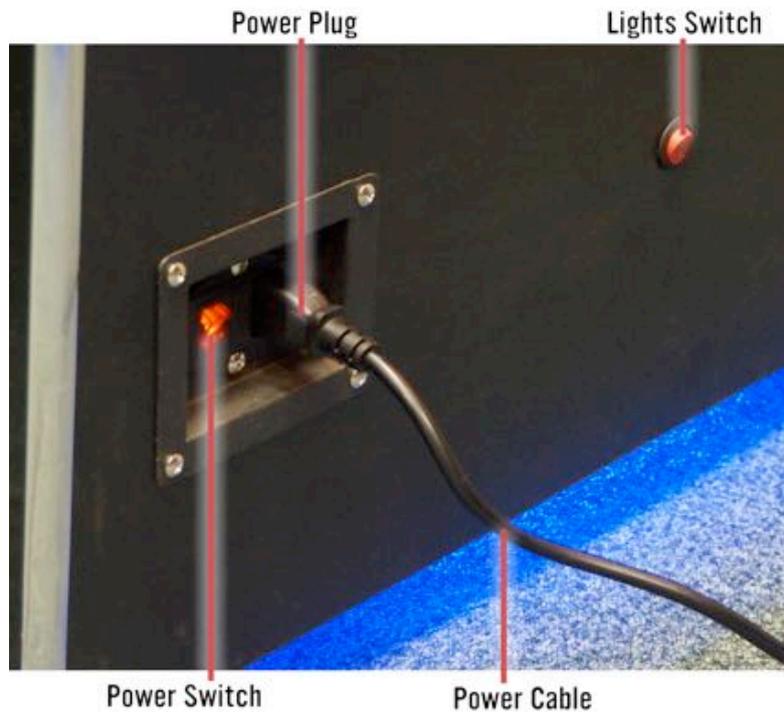

Powering Up


To switch the unit on, plug the power cable into a wall socket, then the connecting lead into the **Power Plug** on the side of the machine. Power the machine on by flipping the power switch to on. The machine will power on, and load up the games menu.

Controlling the Lighting

The under lighting on the machine can be powered on or off depending on your preference. The lighting can be switched on or off using the **External Lighting Switch** on the side of the machine.

Note that this does not control the illuminated buttons.

Neptune Controls (Side)

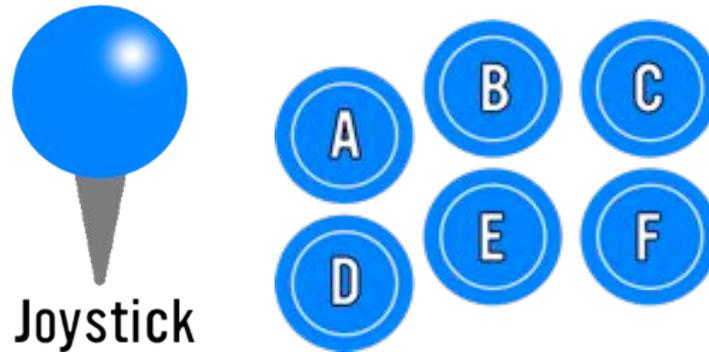

To Play a Game

Note: It is not possible to add any additional games to the system.

To play a game, you must first 'insert coins' into the machine. You can do this by pressing **Insert Coin button**.

You can now navigate through the menu using the joystick, and select your game using the **Player 1 Start button**.

Each game boots 'from fresh' every time, meaning that High Scores will not be saved upon exit.

Switching Games Lists

The ArcadePro Neptune separates games depending on whether they are meant to be played in portrait (vertically) or in landscape (horizontally). Upon start up, the Neptune will load the landscape games list.

If you wish to switch another games list, simply hit the **Player 1 B button on either set of controls**. The new games list will load in, allowing you to make a selection with the relevant set of controls. You are free to switch between games lists whenever you wish when in the games menu.


Starting and Exiting Games

After a game is selected, you can begin either a one-player game with the **Player 1 Start** button, or a two-player game with the **Player 2 Start** button. If playing games in portrait mode, then each player has their own controls on their respective sides of the machine. Some games may require inserting additional 'coins' to play. Do so with the **Insert Coin** button.

To exit any game, hold the **player 1 start button** and the **insert coin button** together until the exit menu is displayed. This menu will allow you to either quit back to the games list, or to resume playing whatever game you are currently playing.

Changing The Volume

You can access the amplifier controls inside the machine via a door in the other side of the machine. Unlock the door with the included key.

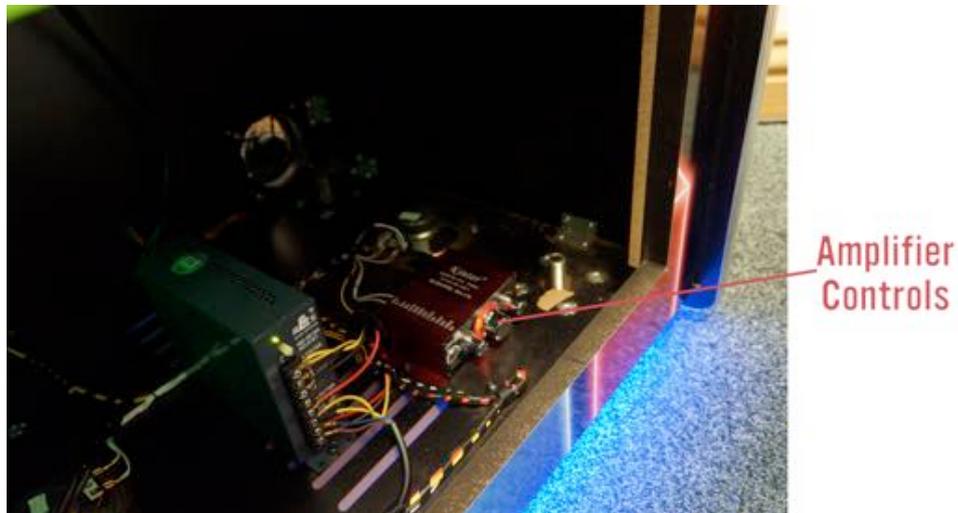


The amplifier controls can be just inside of the machine as seen above. The large central dial changes the volume, and the smaller dials will alter the bass and treble respectively. The amplifier can be switched off completely using the push-button the left of the dials. When done, you can simply close the door and lock up again.

Adjusting the Feet

The ArcadePro Neptune's feet can each be individually adjusted.

To adjust the feet, simply twist the feet in either direction to move up or down. If needed, you can use a 22 mm spanner to turn the nut to the desired level.

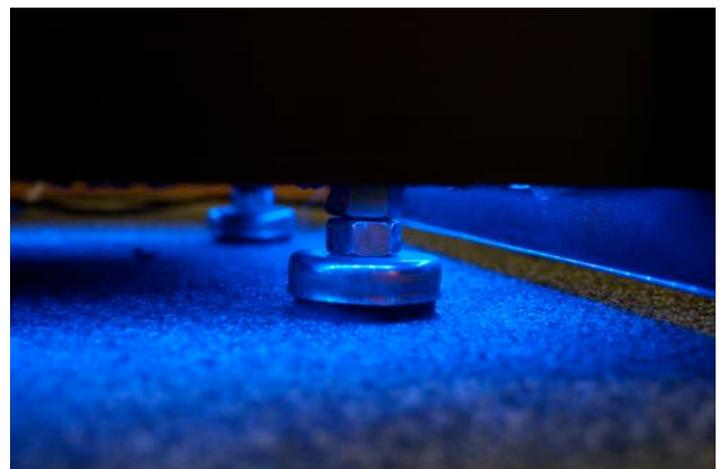

Troubleshooting

No Sound

If there is no sound on your ArcadePro system, check to see if the amplifier on the system is switched on, turned up and that the cabling going into the amplifier system is securely connected.

If problem persists after these checks, contact us.

Changing Components and configuring joysticks

Buttons and joysticks on the system can be swapped over quickly. Visit our buying advice page on our website and check out our troubleshooting video guide (https://www.homeleisuredirect.com/arcade_machines/buying-advice/) to see how to change buttons, joysticks and configure these for use.

Have Fun!



Any Other Questions?
Tel - 0800 622 6464
sales@homeleisuredirect.com

ARCADEPRO®