

ARCADÉPRO<sup>®</sup>

# Saturn 2

2605 - Fridge Model



# User Manual

## BEFORE YOU BEGIN

For details relating to the included mini-fridge, please refer to the other included instructions for safety information and instructions on the fridge's use.

### Setting Up



### Powering Up and Set Up

To switch the unit on, plug the power cable into a wall socket, then the connecting lead into the **Power Plug** on the rear of the machine. Power the machine on by flipping the fridge power switch and the arcade power switch to on. The machine will power on, and load up the games menu.

### Controlling the Lighting

The under lighting on the machine can be powered on or off depending on your preference. The lighting can be switched on or off using the **External Lighting Switch** on the back of the machine. Note that this does not control the illuminated buttons.

 
### **Accessing the Inside of your Machine**

There are some components on the inside of the machine you will periodically need access to (such as the amplifier and settings switch). These can both be accessed by opening the rear panel. Release it with the included key, then open the door.



**Be aware of the power leads inside that will be attached when opening the rear panel.**

The main PCB and the amplifier will be on a small shelf inside.

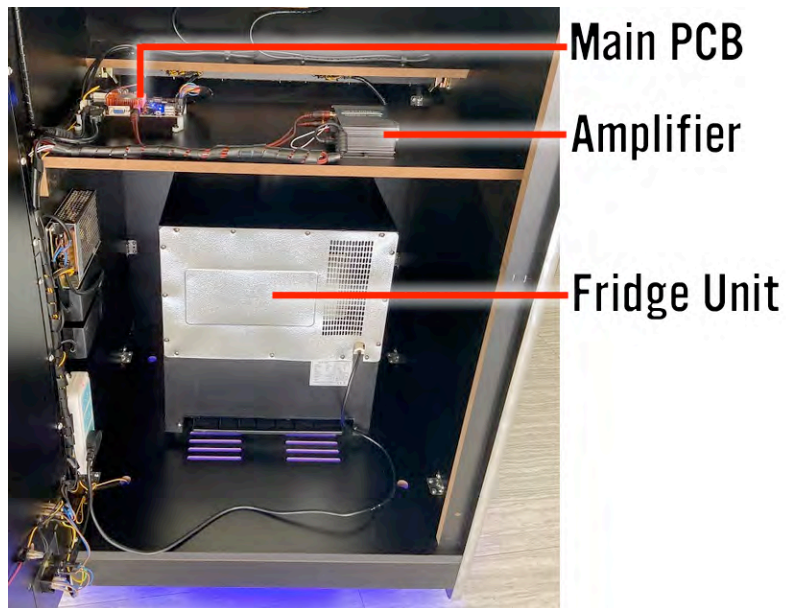

### **Changing the Volume**



The amplifier controls can be altered or switched off entirely with the small amplifier located inside the unit, accessed via the front door with the included key. The large dial in the middle will alter the volume. The smaller dials can change bass and treble.

The amplifier can be switched on or off with the push-switch just to the left of the dials.

 
## **Moving The Machine**



The ArcadePro Saturn is designed to be moved around easily with the added castor wheels. If you wish to make the machine immobile, you can do so easily using the retractable feet at the bottom of the machine. You will find each foot next to each castor wheel.

To adjust the feet, turn each foot by hand, or use a 22mm spanner to turn the nut to the desired level.

## Machine Controls

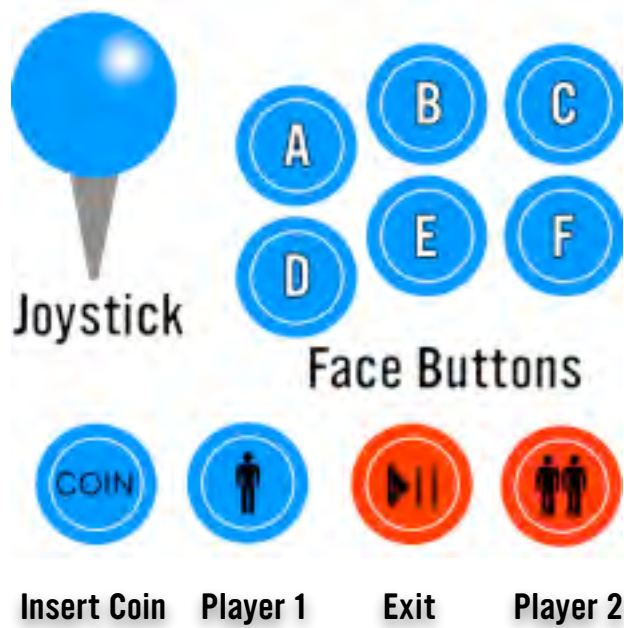


## Pandora's Treasure Menu System

Pandora's Treasure is an easy to navigate menu system that will give you easy access to every game on the system. The system allows you to tailor the games list to your liking, and begin/end games at your leisure. Below gives a basic outline as to what each control button will do.



 Pandora's Treasure splits games between 2D games list and a 3D games list. Your ArcadePro machine will boot up to the search screen when switched on.

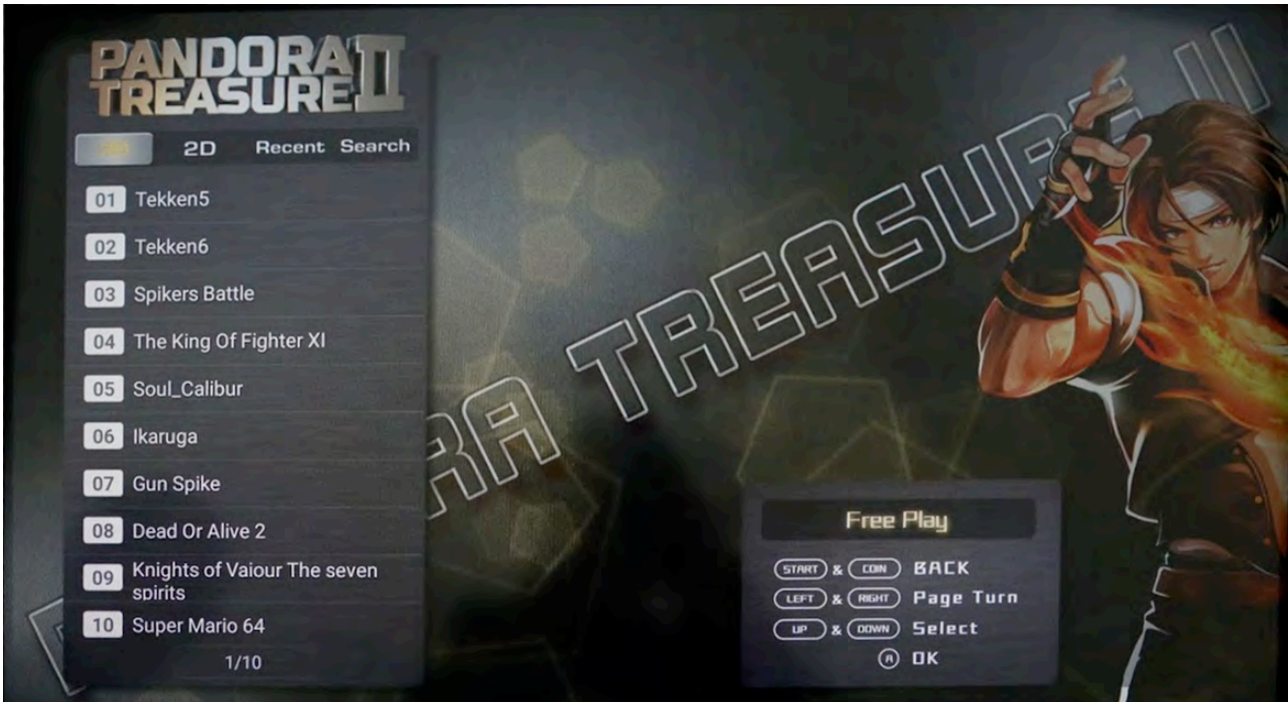

To switch to the games list, scroll to the top of the list where the currently seen list will be highlighted. You can then move left or right using the **Player 1 joystick** to switch between the lists.

Use the **Player 1 joystick** to navigate through the lists, then select your game with the **Player 1 A button**.

A 1 player game can be started with the **Player 1 Start button**. A 2 player game can be started with the **Player 2 Start Button**.

If a game requires coins to play, do so by pressing the **'Insert Coin' button**.

A game can be paused or quit at any time by pressing the **Pause Button**, where you will be given the option to resume your current game, or quit back to the Pandora's Treasure menu.

Every time a game is loaded from the menu, it is loaded 'from fresh', meaning that high scores are not saved between games, unless saved manually by the player using the saving and loading system.

## Saving and Loading a Game

The system allows you to save your progress at any point, and then return to that point at a later time. This is done by saving a “State”.

 
### About “States”

On this ArcadePro system, a “State” can be described as a specific point or moment when in the game. When you load a state, you will return in the game to the exact moment where you saved it.

States can be saved, or loaded at any point of the game.

On this system, **there can only be one state per game**. Each new state you save will overwrite the last.

### How to use

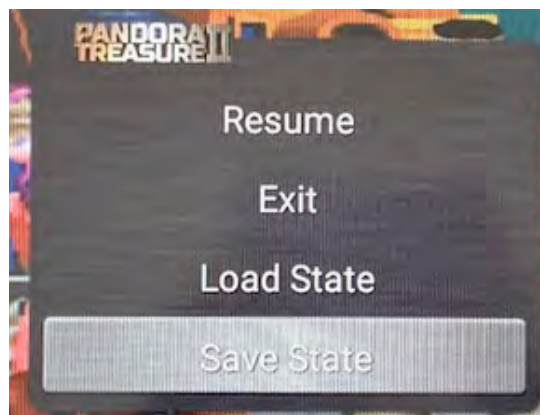


To access the save and load system, pause the game you're currently playing using the **Pause** button, then navigate down to the “**Save State**” option using the joystick. Save the state by pressing the **Player 1 A** button. You can resume the game by navigating back up to “**Resume**”, and hitting the **Player 1 A** button.

To load the last state you saved, pause the game using the **Pause** button, and then navigate down to the “**Load State**” option using the joystick. Press the **Player 1 A** button to load the most recent save state. Resume the game by navigating up to “**Resume**”, and hitting the **Player 1 A** button.



## Search Function

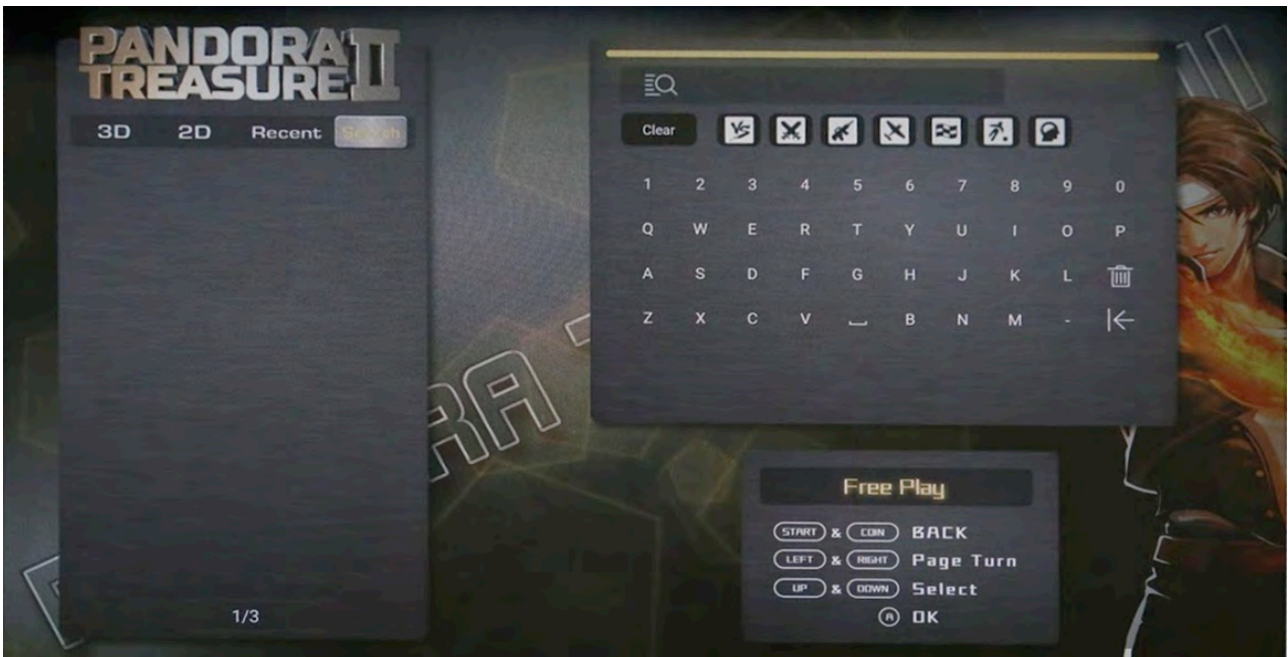 

Pandora's Treasure includes a very useful search function that can help you to find your favourite games in seconds, without having to scroll through the entire games list.



To find this option, highlight the games lists at the top, then navigate right to select the search function. In this menu, you can use the **Player 1 joystick** and **Player 1 A button** to type what you want to search for with the on-screen keyboard.


As you enter in letters, the list on the left will begin to fill with games that match your search term. You can use the **Player 1 joystick** and **Player 1 A button** to select and play any of the search results.

When you exit the game, you will return to your original search results, where you can play another result, search for another game or navigate back to the main games lists.

## **Pandora's Treasure Options**

 Pandora's treasure features an options screen that allows you to customise your unit.

### **Accessing The Options Menu**

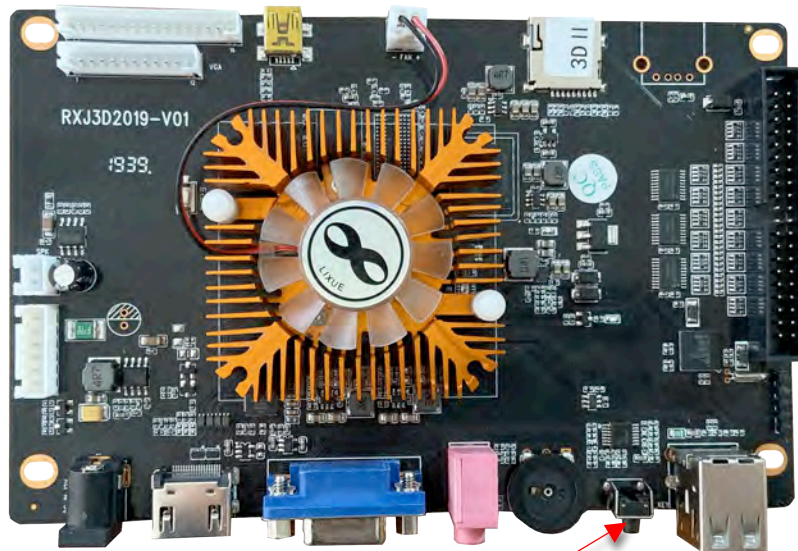

**Settings Switch**

To access the options on your unit, open the access door on the back using the machine's included key and locate the main circuit board inside. Press the small switch as illustrated.

The options list contains a comprehensive list of settings that can customise your ArcadePro machine. Below outlines the options that you can modify.

## Pandora's Treasure Menu



**We do not recommend modifying any options not covered by the following list. Doing so can result in reduced functionality of your system.**

- **IO Test** – Use this to test input functionality on all joysticks and buttons
- **Game List Setting** – Customise the games list. Use to hide or display what appears in the games list.
- **Background Music** – Use to switch the system's background music on or off.
- **Wallpaper** – Use to change the background wallpaper displayed on your ArcadePro system.
- **Language** – Use to change the system's default display language.
- **Discard and Exit** – Select this option to return to the games list, discarding any changes you may have made.
- **Save and Exit** – Select this option to return to the games list, saving any changes you have made to options.

## Customising Your Games List

**Note: It is not possible to add any additional games to the system.**

The games list can be changed using the Game List Setting option in the Pandora's Treasure Settings Menu.

### Basic Controls and Key



Up - Scroll up  
Down - Scroll down



Make  
Selection



Hide All  
Games



Show All  
Games



Back

01

Game Will Be  
Displayed

X

Game Will Be  
Hidden

Hiding certain games on the 2D games list can make it easier to find your favourite games on the system by displaying only the games you wish to see.

If a game in the list is prefixed with its number, then it will be displayed in the 2D games list upon exiting.

If a game is prefixed with a **red X**, then it will be hidden in the 2D Games List upon exiting.

## Troubleshooting:

### Wrong Language on Startup

There's a slim chance that upon arrival, your machine will not be in English. This is an occasional leftover from checks during production and is easily rectified.

- Access the Options Menu (See page 9)
- Scroll down to the option marked with a flag
- Press A until the language changes to English
- Save and Exit as normal

You can also view our video on how to change the language on the buying advice page on our website at [https://www.homeleisuredirect.com/arcade\\_machines/buying-advice/](https://www.homeleisuredirect.com/arcade_machines/buying-advice/)

### No Sound

If there is no sound on your ArcadePro system, check to see if the amplifier on the system is switched on, turned up and that the cabling going into the amplifier system is securely connected.

If problem persists after these checks, contact us.

**Have Fun!**



Any Other Questions?  
Tel - 0800 622 6464  
[sales@homeleisuredirect.com](mailto:sales@homeleisuredirect.com)

